 
 

FACTORY FURNITURE

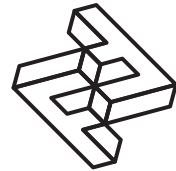

Concrete RAKT planter

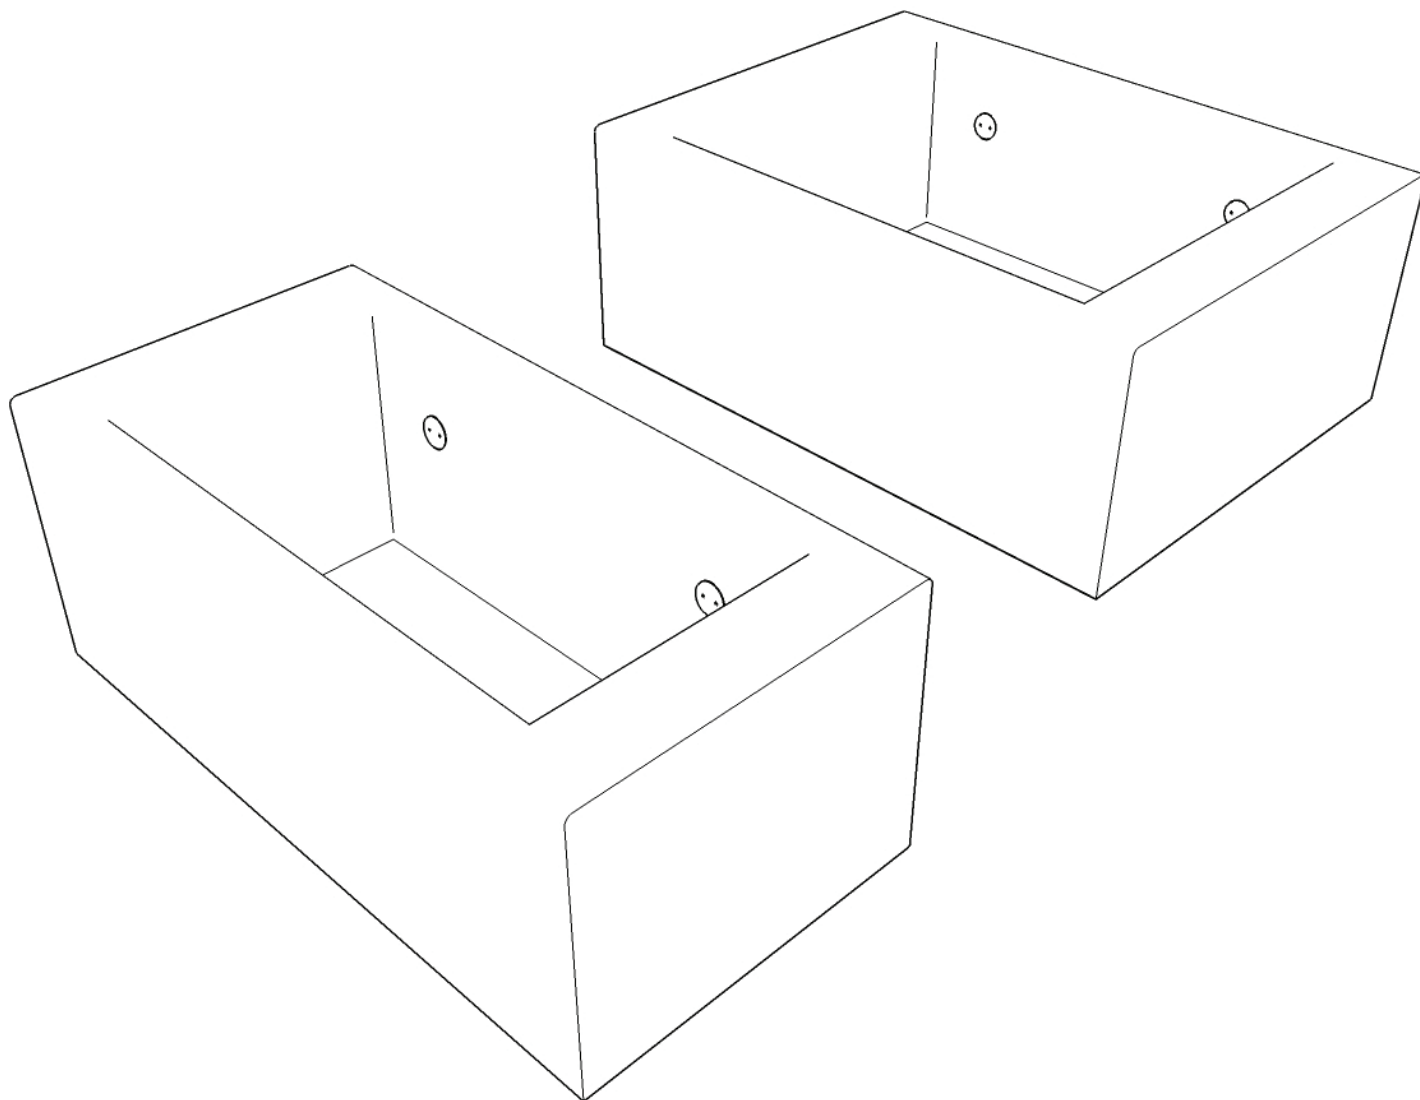

Operation & Maintenance Manual

Factory Furniture Ltd | 5 Pioneer Road | Faringdon | Oxfordshire SN7 7BU | T +44 (0)1367 242731
hello@factoryfurniture.co.uk | www.factoryfurniture.co.uk

We reserve the right to change specification without notice. © 2017 Factory Furniture Ltd

Introduction

Design

Design, shop drawings and development by Factory Furniture Ltd.

Manufacture

Factory Furniture manufactured components. Products are assembled in Factory workshops, checked and dispatched ready for installation. Replacement products or components thereof should be ordered direct from Factory Furniture Ltd.

Copyright

The design copyright for the product and drawing copyright remains the sole property of Factory Furniture Ltd.

General Specifications

1.2x0.6m Planter

Metric L 1200mm | W 600mm | H 465mm

Imperial L 3' 11" | W 1' 11½" | H 1' 6½"

Approx Weight 474kg

Planter capacity 125ltrs

1.2x0.9m Planter

Metric L 1200mm | W 900mm | H 465mm

Imperial L 3' 11" | W 2' 11½" | H 1' 6½"

Approx Weight 630kg

Planter capacity 215ltrs

Detailed Material & Finish Specifications

Planter

- Manufactured from smooth white concrete. Surface is sealed to make it water repellent. Galvanised steel internal reinforcement.
- 4 no. lifting sockets included on top face beneath slat assembly (RD20 knuckle thread Din 405) **Lifting eyes not supplied**

General Maintenance *(Recommended Schedule & Guidelines)*

Daily/Weekly/Monthly *(or as adopted)*

Visual checks of planter - check all items for superficial or physical damage.

3 montly

Clean as required with soap and water

Annually

Full clean as detailed below

Specific Maintenance Details

Concrete

Clean as required, but at least every three months, using a damp cloth and warm soapy water. Before using any cleaning agents to remove graffiti etc. try on a small, inconspicuous area first to avoid causing more unsightly damage. Clean with a stiff brush once per year, especially in more exposed locations, in order to prevent a verdigris type build up on the surface. Ideally, this should be completed in early spring.

Repairs

Heavy Damage

In the event of serious damage to any component, replacements should be ordered from Factory Furniture Ltd. Should further assistance be required (or if the product needs to be disassembled for any reason), please contact Factory Furniture for detailed technical advice.

Contacts

Factory Furniture Ltd
5 Pioneer Road
Faringdon, Oxon
SN7 7BU UK

 
Tel +44 (0) 1367 242731

Email hello@factoryfurniture.co.uk


Web www.factoryfurniture.co.uk

Installation Instructions

ALL INSTALLATION WORKS TO BE CARRIED OUT BY COMPETENT PERSONNEL - INSTALL AS COMPLETE UNIT

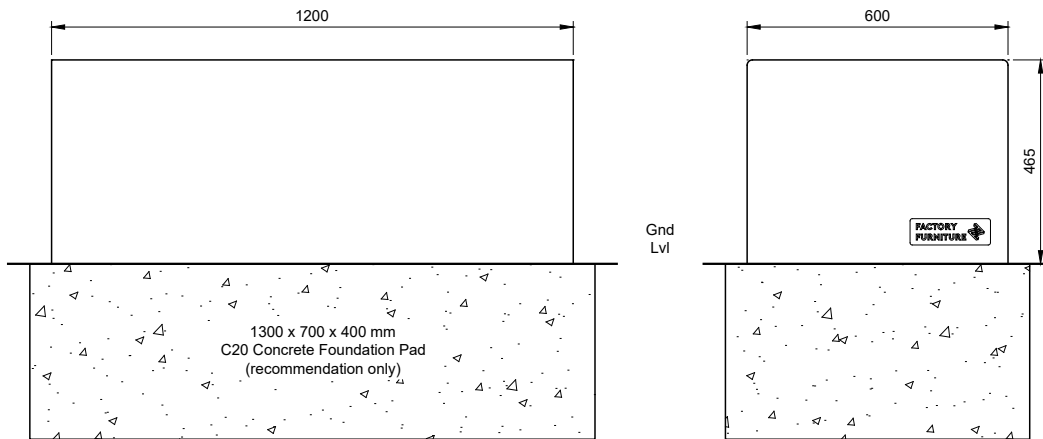

 1.2 x 0.6m Planter

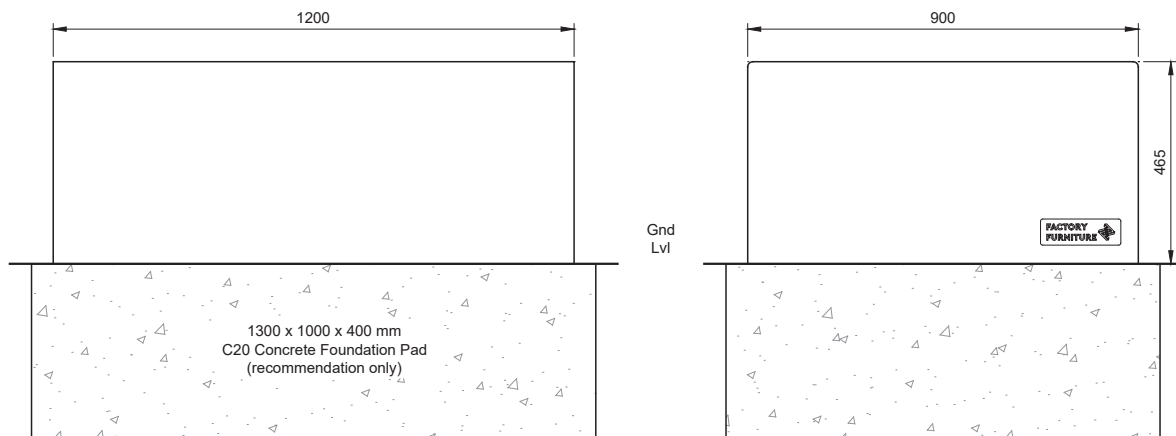

1.2 x 0.9m Planter

Concrete Rakt Planter (0.6m & 0.9M)

1. Install suitable foundation pad (see illustrationS) with top face at ground level. Allow time for concrete to set (depends on size but minimum 48hrs and ideally at least 7 days).
2. Ensure that surface of pad is clear of debris, smooth and level as any lumps in the surface this may cause the planter to rock.
3. Using a crane or forklift - position planter in correct orientation with base centrally on foundation pad. 4 no. integrated lifting sockets are provided for each planter section. ****Please note: lifting eyes not supplied****
4. Screw on lifting socket dust covers (supplied)