


FACTORY FURNITURE

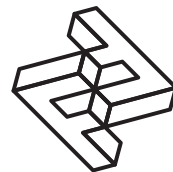

TREE table

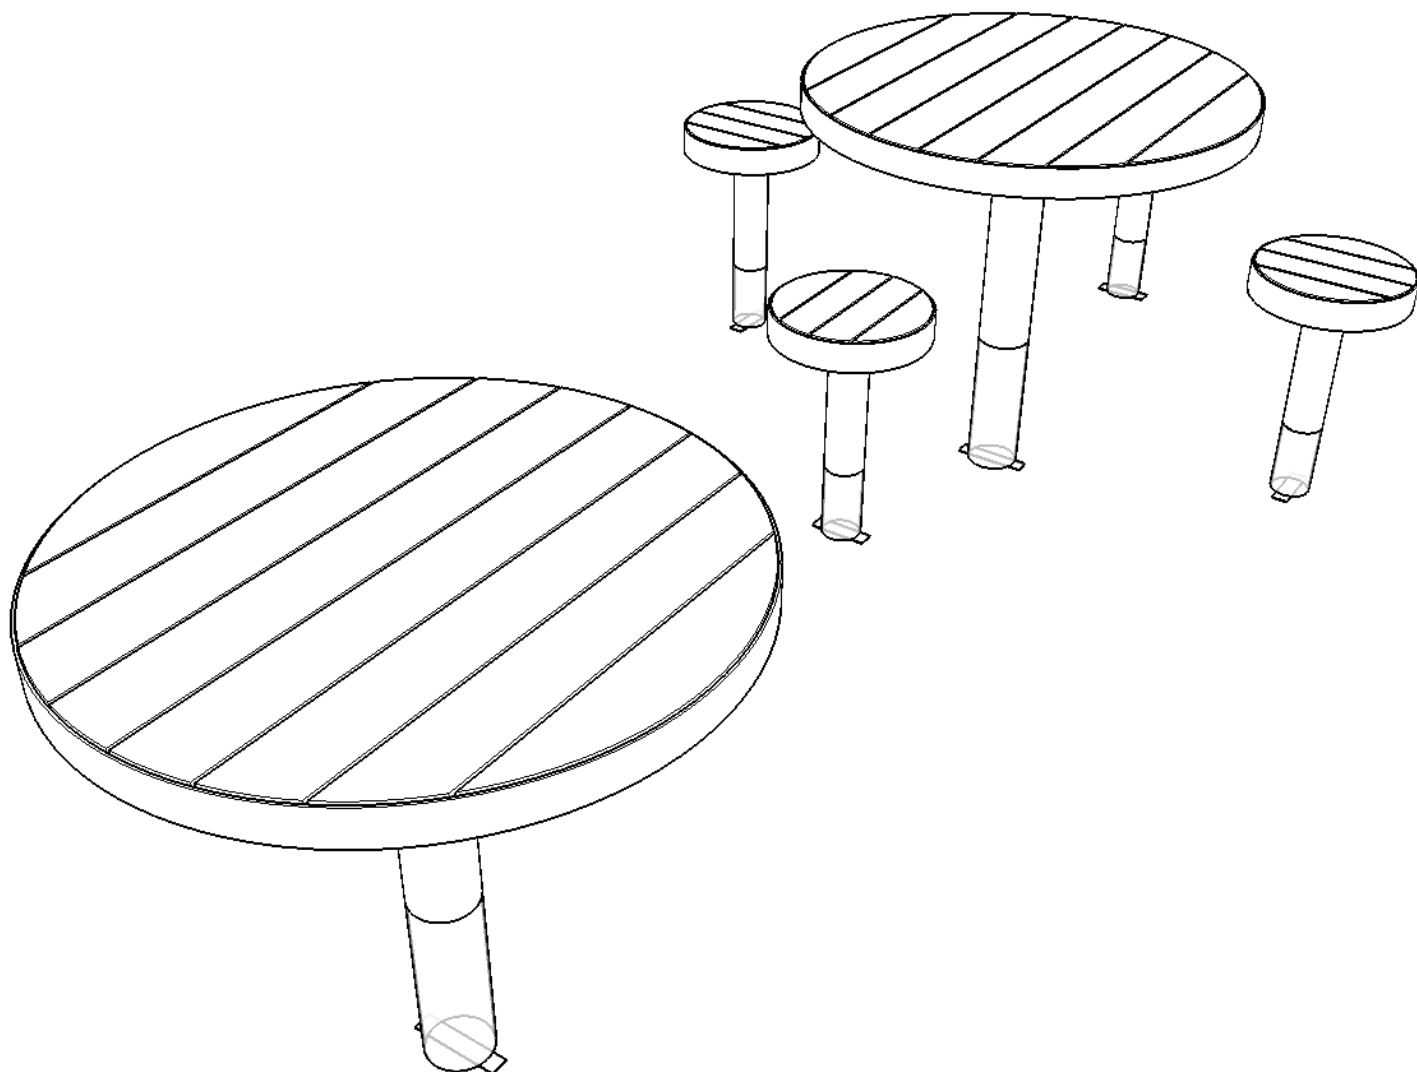

Operation & Maintenance Manual

Factory Furniture Ltd | 5 Pioneer Road | Faringdon | Oxfordshire SN7 7BU | T +44 (0)1367 242731
hello@factoryfurniture.co.uk | www.factoryfurniture.co.uk

We reserve the right to change specification without notice. © 2017 Factory Furniture Ltd

Introduction

Design

Design, shop drawings and development by Factory Furniture Ltd.

Manufacture

Factory Furniture manufactured components. Products are assembled in Factory workshops, checked and dispatched ready for installation. Replacement products or components thereof should be ordered direct from Factory Furniture Ltd.

Copyright

The design copyright for the product and drawing copyright remains the sole property of Factory Furniture Ltd.

General Specifications

Table

Metric diameter 1200mm | height 750mm*

Imperial diameter 3' 11" | height 2' 5½"

* Not including +400mm (1' 3½") below ground level

Approx Weight 67kg

Stools (if applicable)

Metric diameter 400mm | height 450mm*

Imperial diameter 1' 3½" | height 1' 5½"

* Not including +200mm (8") below ground level

Approx Weight 13kg each

Detailed Material & Finish Specifications

Slats (Table & stools)

- Manufactured from FSC® certified tropical hardwood (*other FSC timber options available upon request*)
- Profiled and left untreated as standard (*oil or microporous woodstain treatment available on request*)
- Supported by and fixed to frame with 4 no. fixing points per slat



Base / Frame (Table & stools)

- Manufactured from stainless steel with satin polished finish
- All welded construction
- Stainless steel 'T' bar at foot of base for better anchorage in foundation pad
- Root fixed below ground level

General Maintenance (Recommended Schedule & Guidelines)

Daily/Weekly/Monthly (or as adopted)

Visual checks of table / stool top, frame and base - check all items for superficial or physical damage.

Three Monthly

Clean all items as detailed below check all fixings are seated correctly; inspect timber for serious damage and splinters.

Six Monthly

Secure all fixings; full clean as detailed below; check that table / stools are firmly secured to the ground

Specific Maintenance Details

FSC Timber

Clean with a stiff brush once per year, especially in more exposed locations, in order to prevent a verdigris type build up on the timber surface. Ideally this should be completed in early spring. During the cleaning stage, all exposed timber surfaces should be inspected for splits and splinters. Any splinters and graffiti should be removed and the surface sanded with 100 grit sandpaper in order to remove any uneven / sharp edges or surfaces.

During the first few months after installation the tannin naturally occurring in the timber may leach out and cause a brown staining on the bases. This may be removed with a light solution of household bleach and water.

Stainless Steel (polished stainless steel only)

Clean as required, but at least every three months, using a stainless steel polish and a lint free cloth. To remove ground in dirt, a stainless steel finishing pad may be required.

Repairs

FSC Timber

For light damage, please see section on specific maintenance details above. For instances of heavy damage, the timber item should be replaced. Please order against the part number reference in the reordering section towards the end of this manual.

Stainless Steel

Light damage (surface scratches etc.) can be removed using an emery pad (240 grit) and freeing oil such as 'WD40'. Care should be taken to follow the direction of the brushing grain. It is recommended that a trial repair be carried out on an unimportant surface first. No corrosive cleaners or other abrasives should be used. Any contamination, particularly carbon steel scuffs from vehicles, should be quickly removed to avoid corrosion.

Heavy Damage

In the event of serious damage to any component, replacements should be ordered from Factory Furniture Ltd. In this event (or if the product needs to be disassembled for any reason), please contact Factory Furniture for detailed technical advice.

Reordering / Spares

Part No.

Item Description

There are no spare parts for this model of table

AutoCAD Drawing List

FF2003 / 01	TREE TABLE	GENERAL ARRANGEMENT DRAWING
FF2003 / 02	TREE TABLE	X-SECTION DRAWINGS
FF2003 / 03	TREE TABLE	PARTS DETAIL DRAWINGS
FF2003 / 04	TREE TABLE	FABRICATION DRAWINGS
FF2003 / 05	TREE TABLE	SETTING OUT DRAWING
FF2003 / 06	TREE TABLE STOOL	GENERAL ARRANGEMENT DRAWING
FF2003 / 07	TREE TABLE STOOL	STOOL PART DETAIL DRAWINGS
FF2003 / 08	TREE TABLE & STOOLS	SETTING OUT DRAWING PICNIC ARRANGEMENT

Contacts

Factory Furniture Ltd
5 Pioneer Road
Faringdon, Oxon
SN7 7BU UK


Tel +44 (0) 1367 242731

Email hello@factoryfurniture.co.uk

Web www.factoryfurniture.co.uk

Installation Instructions

ALL INSTALLATION WORKS TO BE CARRIED OUT BY COMPETENT PERSONNEL - INSTALL AS COMPLETE UNIT

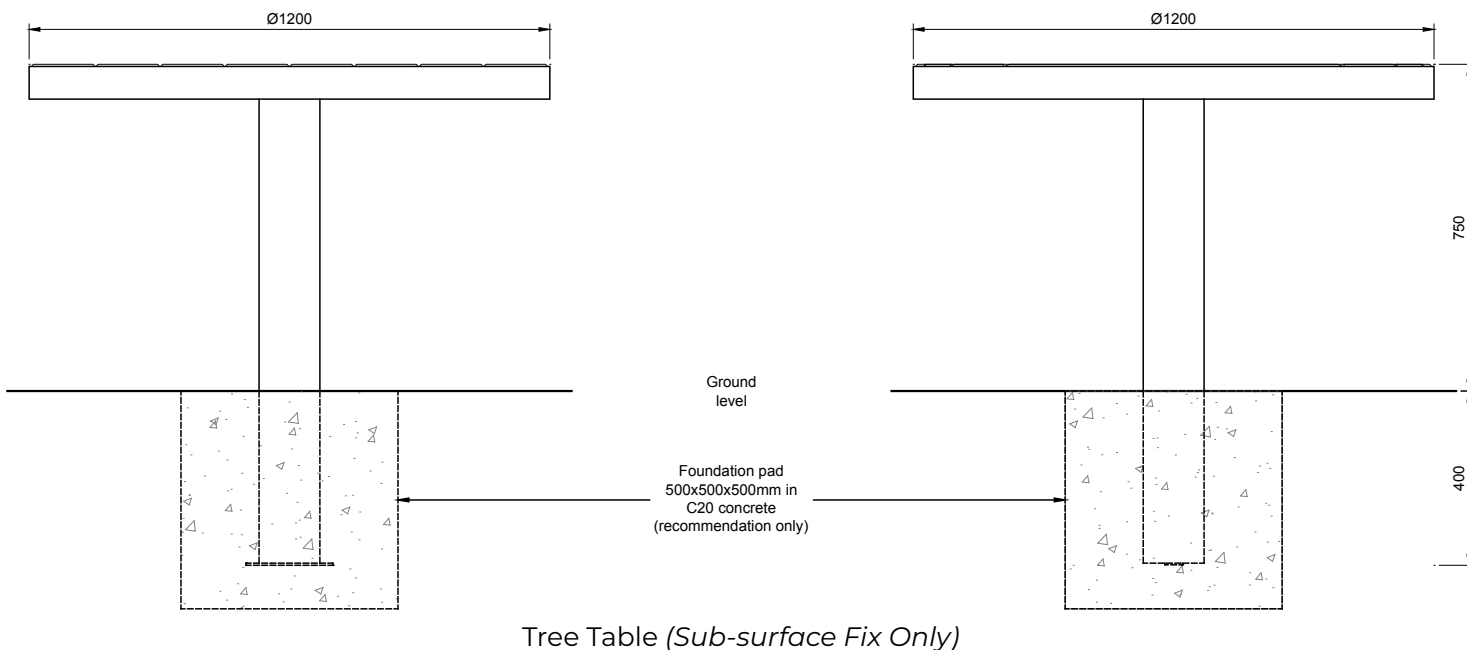


Tree Table (sub-surface fix only)

1. Install suitable foundation pad (see illustration) with top face at ground level
2. As soon as possible after pouring concrete for pad, position table in correct orientation with base centrally in foundation pad. Maintain table at correct height (400mm below ground) and vertical whilst concrete sets (at least 24 hours).



IMPORTANT NOTE:

Ensure that stainless steel is protected during site cutting of stone – contamination from disc cutters will produce corrosion on stainless steel components.

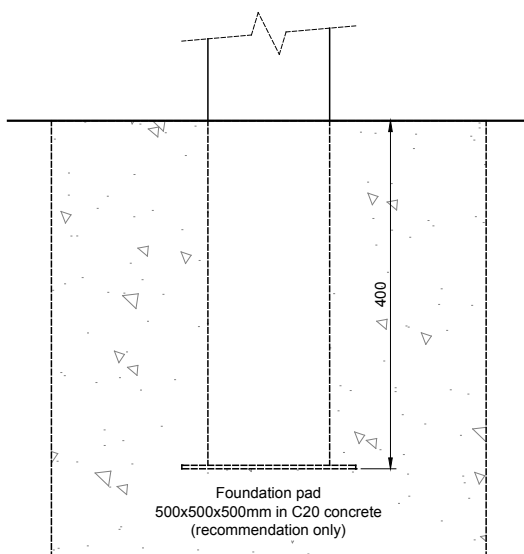

Installation Instructions

ALL INSTALLATION WORKS TO BE CARRIED OUT BY COMPETENT PERSONNEL - INSTALL AS COMPLETE UNIT

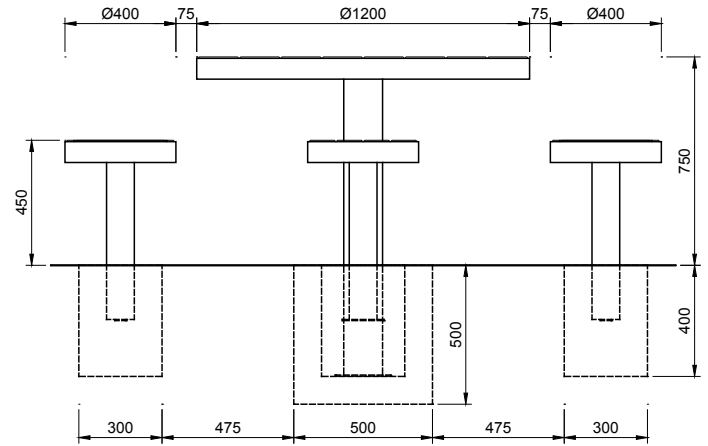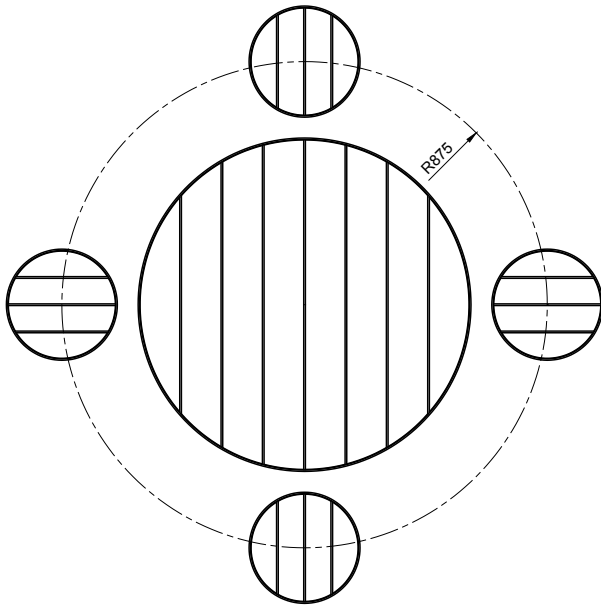

Tree Picnic Set (Sub-surface Fix Only)

Tree Picnic Set

1. Install suitable foundation pads (see illustration) with top face at ground level
2. As soon as possible after pouring concrete for pads, position table and stools in correct orientation with bases centrally in foundation pads. Maintain furniture at correct heights (table - 750mm & stools - 450mm above ground) and vertical whilst concrete sets (at least 24 hours).

IMPORTANT NOTE:

Ensure that stainless steel is protected during site cutting of stone – contamination from disc cutters will produce corrosion on stainless steel components.

